
## Quick Installation Guide v1.0.0


## CAUTION


- Please make sure the mounting surface is strong enough to hold at least three times of the camera weight.
- Keep the protection film on the dome before installation and adjustment finished to avoid possible scratch.

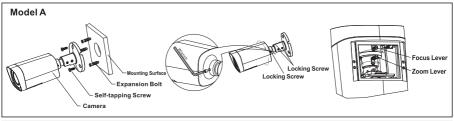



For wooden mounting surface, expansion bolts are optional.



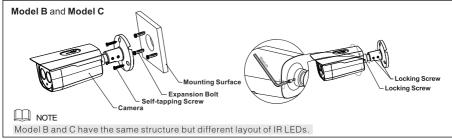






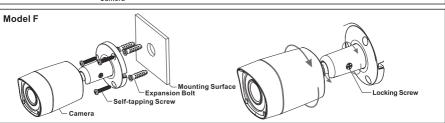

## Поставщик систем безопасности TELECAMERA.RU

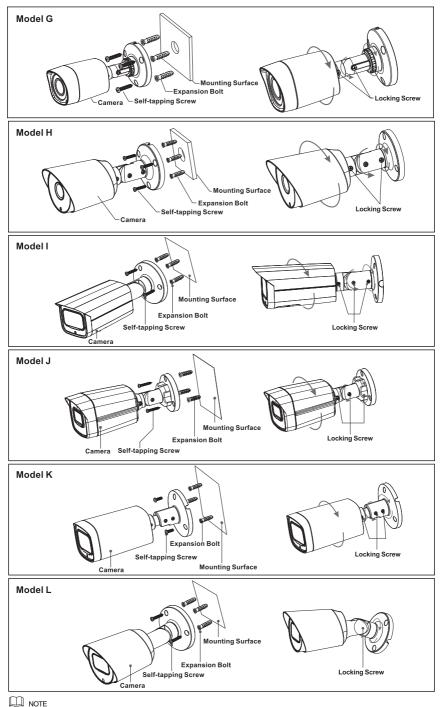

المحتاد المحت